

## Honda EU6500is & EU7000is inverter exhaust extension

NOTE: A generator should not be run in or in close proximity to a living area. Allow components to cool after running generator before touching.

Due to the nature of galvanized steel flex pipe the length of the pipe as shipped (compressed) may be less than the overall length stated. When completely extended the overall length will match the stated length.

IMPORTANT: We highly recommend keeping the first couple feet of a silicone tubing run fairly straight to reduce heat buildup and extend the life of the tubing. A tight bend will cause a kink and premature failure.

1. Remove 2 screws that hold the spark arrester flange to the generator. Some models require the removal of the flange (if assembly will not fit flush on the flange, remove it).
2. Using supplied screws and hex wrench, attach gasket and extension fitting over the spark arrester flange onto muffler.
3. Attach fittings and/or tubing. Teflon tape or similar thread compound on threads will add additional air tightness to the assembly.

Positive feedback is greatly appreciated, but if you are not satisfied, please contact us.

See us at: <https://genexhaust.com/>