

## Honda EU3000iS Drain Tube

NOTE: Allow components to cool after running generator before touching.

1. Slide the oil change tube over the oil drain port on the generator until seated against the engine block.
2. Use either a 3/8" drive 10mm deep well socket or regular socket with an extension to remove the plug.
3. Allow oil to drain.
4. Thread plug back into oil drain port (while oil drain tube is still attached).
5. Remove oil drain tube
6. Clean-up. Isopropyl alcohol can be used on the tube without adverse effects to the finish or O-ring.

Please send any questions, pictures or comments that you have to [support@genexhaust.com](mailto:support@genexhaust.com).

Positive feedback is greatly appreciated, but if you are not satisfied, please contact me.

See us at: <https://genexhaust.com/>