

Honda EU3000is exhaust extension

NOTE: A generator should not be run in or in close proximity to a living area. Allow components to cool after running generator before touching.

Due to the nature of galvanized steel flex pipe the length of the pipe as shipped (compressed) may be less than the overall length stated. When completely extended the overall length will match the stated length.

IMPORTANT: We highly recommend keeping the first couple feet of a silicone tubing run fairly straight to reduce heat buildup and extend the life of the tubing. A tight bend will cause a kink and premature failure.

1. Remove 4 cap nuts that secure the rear cover, remove cover.
(Refer to pages 51 & 52 of the owner's manual for illustrated details for steps 1-6)
2. Remove 4 bolts that secure the upper muffler cover, remove cover.
3. Remove 4 bolts that secure the rear handle, remove handle.
4. Remove 4 bolts that secure the rear under plate, remove plate.
5. Remove lower muffler protector.
6. Remove 3 bolts that secure the exhaust tail pipe, remove pipe.
7. Attach only gasket & flange at this point using supplied screws and nut (lower hole).



8. Re-assemble stock parts in reverse order, except upper muffler protector. Attach fittings and/or hose after plastic housing (in step 1) is re-assembled. Teflon tape or similar thread compound on threads will add additional air tightness to the assembly.

9. Assemble remainder of supplied exhaust components.



Positive feedback is greatly appreciated, but if you are not satisfied, please contact us.

See us at: <https://genexhaust.com/>