

## No Mess Oil Change & Filler Tube



NOTE: Allow components to cool after running generator before touching.

1. Turn gas cap vent lever to the 'off' position.
2. Remove side cover.
3. Remove dipstick and replace with Change & Filler Tube
4. Tilt engine to empty the oil. Hint: using a block of wood makes the job easier.
5. Once empty, tilt the engine the opposite direction and refill with the recommended grade and amount of oil using the Change & Filler Tube as a no leak funnel. Turn gas cap vent lever back on.
6. Clean-up. A wipe down with isopropyl alcohol will make quick work of it job. Isopropyl alcohol can be used on the tube without adverse effects to the finish or O-ring.

Please send any questions, pictures or comments that you have to [support@genexhaust.com](mailto:support@genexhaust.com).

Positive feedback is greatly appreciated, but if you are not satisfied, please contact me.

See us at: <https://genexhaust.com/>